


Mini Tag 1.0 User's Manual

Summarize:

- 1.This product can display ASCII character and picture, it can store up 6 messages(2000 character)and can be switched the message when it displays.
- 2.Nine display modes,three stop-display modes, speed/brightness/stop-time are adjustable at 9 modes.
- 3.Two ways to update the display information: Using key-press and IR by PC.
- 4.Power supply is by CR 2032 battery: if you find the brightness is not enough or can not be communicated normally, please change the battery.

Notes: Page Up =UP, Page Down=DOWN

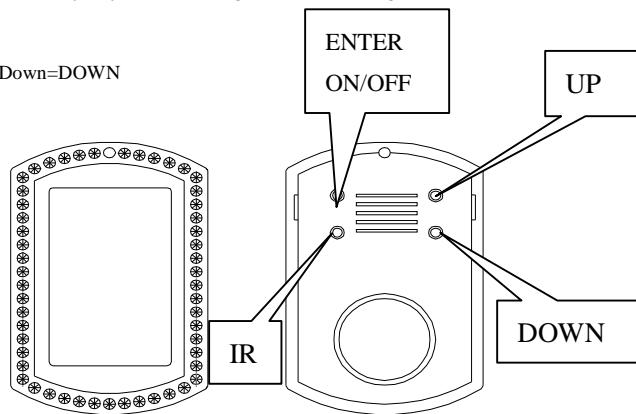


Operation by Key-press:


1.Illustration:

 
- a) Enter(ON/OFF):key- Press for confirmation and turn on/off .
- b) UP: for page-up .
- c) DOWN: for page-down and switch message.


2.Turn on/off: when it displays normally, press “enter” to turn on/off the display.


3.Select message: when display normally, press “down”, then it will display next information automatically.

4.Display mode selection: Total 9 modes: (1 .automatic display 2.up to down 3.static display 4. down to up. 5. off display mode 6. left moving 7.on display mode 8. right moving 9. meteor display) Press “UP” to enter the menu, then using “UP” or “down” to adjust, when display “”, press “ENTER” to enter the display mode, using “UP” or “DOWN” to set the display mode(1-10), press “enter” to save and exit.



5. Still mode: Total three display modes(1 static display 2. inverse display 3 flash display). Press “UP” to enter the menu, then using “UP” or “down” to adjust, when display “”, press “ENTER” to enter the still mode-setting, using “UP” or “DOWN” to set the still mode(1-10), press “Enter” to save and exit.

6.Adjust speed: Press “UP” to enter the menu, then using “UP” or “down” to adjust, when display “”, press “ENTER” to enter the speed- setting mode, using “UP” or “DOWN” to set the speed (1-9), press “enter” to save and exit.

7.Adjust brightness: Press “UP” to enter the menu, then using “UP” or “down” to adjust, when display “”, press “ENTER” to enter the brightness-setting mode, using “UP” or “DOWN” to set the brightness (1-9), press “enter” to save and exit.

8. Still time: Press “UP” to enter the menu, then using “UP” or “down” to adjust, when display “”, press “ENTER” to enter the staying-time setting mode, using “UP” or “DOWN” to set the still time (1-9s), press “enter” to exit.

9. Input text :

- a) Press “UP” to enter the menu, then using “UP” or “DOWN” to adjust, when display “”.
- b) press “ ENTER” to enter the text mode, When display “”, confirm the picture.
- c) Using “UP” and “DOWN” to adjust the text, then press” ENTER” to confirm .
- d) After inputting a character , there is a number on the left bottom to show the number of total inputting character .
- e) when need to exit text: press “DOWN” for three seconds or wait for ten seconds to exit automatically.